



# IMPORTANT!



## Instructions on how to use BANGER ROPES safely

Explosives 1.4G - UN number 0431 - Articles, pyrotechnic for technical purposes. These are potentially dangerous items and must be handled with care, please read the following instructions and follow them carefully. CE NUMBER 1395-P1-0274/2015 - SOUND EMITTER

- These powerful banger ropes should be handled with extreme care - always wear appropriate personal protective equipment when handling and lighting banger ropes.
- Banger ropes are for professional use and are only intended for agricultural bird scaring in open fields, and must not be used as fireworks.
- The banger rope is designed to burn for a period of approximately 5 - 6 hours for day ropes or up to 12 hours for continuation ropes.
- Bangers are placed equal distances apart to explode at 15 - 30 minute intervals.
- **NEVER** hang a banger rope where a member of the general public could tamper with it.
- **NEVER** hang a banger rope on a public footpath or bridleway where the general public have a right of way.
- Beware of neighbour's livestock near the banger rope site.
- Keep well away from flammable materials including flammable gases.
- **NEVER** light the fuse of a banger.
- **DO NOT** hold the rope during lighting or once it is alight.
- **DO NOT** dismantle the rope or the bangers.
- **NEVER** remove an individual banger off the rope.
- **NEVER** relight a banger rope that has been extinguished. Dispose in the recommended way - see below.
- If a banger falls to the ground and has not exploded, do not try to re-ignite it. Any unexploded bangers should be left untouched for at least 6 hours, pick up with a pair of tongs. After which they should be soaked in a bucket of water for a minimum of 24 hours. Then dispose in normal refuse while still damp. **NEVER** relight a banger that has been soaked in water and subsequently dried out.
- If a banger has come off the rope and is loose in the box **NEVER** light it. It should be soaked in a bucket of water for 24 hours. Then dispose in normal refuse while still damp.
- Always store in a cool dry place, well away from any source of ignition, flammable materials or other hazardous goods. A metal cabinet is ideal. Use within 5 years of purchase.
- Not to be sold to, or used by persons under 18 years of age.

**ALWAYS USE THE CORRECT SAFETY AND PROTECTION EQUIPMENT WHICH MUST COMPLY TO THESE STANDARDS**



Eye protection to EN166 - B



Gloves to EN12477:2001



Hearing protection to EN352-1:2002

**1. REMOVE ROPE FROM BOX AND UNTIE SO IT CAN HANG FREELY**


**2. HANG ROPE IN A TREE AWAY FROM WHERE IT COULD BE FOUND - A MINIMUM OF 1.8m FROM THE GROUND USING THE HANGING STRING PROVIDED**



**3. STRAIGHTEN FUSE AT RED END OF BANGER ROPE**

**4. LIGHT THE TAPER PROVIDED**

**5. AT ARM'S LENGTH, IGNITE THE FUSE ENSURING THE TAPER IS KEPT WELL AWAY FROM THE LOWEST BANGER**

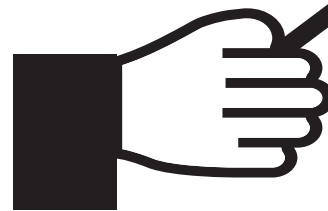

**6. RETIRE IMMEDIATELY TO A MINIMUM DISTANCE OF 25M**



NB 1395



**FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY**