



**LOG**  
*master*

## Assembly & User Guide

**The Original  
Logmaster**

CE

[www.portek.co.uk](http://www.portek.co.uk)

Part No: 090


# Instructions for assembly of the LogMaster

## Before you start - tools you will require:

17 mm or 5/8" Spanner (Pivot Clamp Bolt)  
and 13 mm or 1/2" Spanner (Chain Guard Nut).


## Fig 1. Height Adjustable Legs and Feet

Insert support feet into the hollow legs of the sawhorse and adjust height to suit. Tighten fixing bolts supplied and place logmaster on a flat surface. Push the red feet onto the bottom of the telescopic leg as shown.

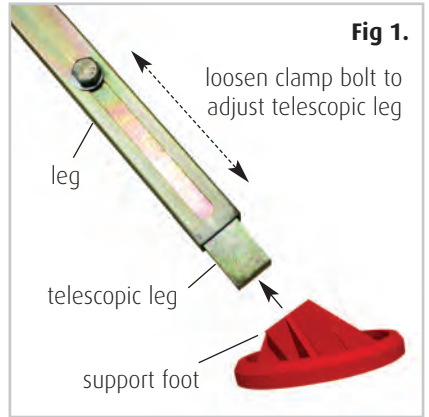


## Fig 2. Pivot Clamp Support and Measuring Rod

Insert the pivot clamp support (adjustable vertically) into the sawhorse table along with the measuring rod holder (adjustable horizontally) using the bolt and washer supplied. The vertical adjustment for the pivot clamp support is to accommodate different sized chain bars - the larger and longer the bar, the higher the pivot clamp should be placed. Adjust so that the tip of the chain bar extends beyond the table, so that it is cutting completely through the log. The measuring rod can be adjusted horizontally to allow each log to be cut to the desired length.

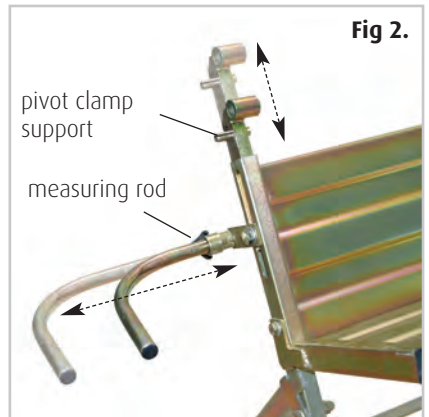


## Fig 3. Pivot Clamp

Insert the male rod on the pivot clamp into the female cylinder on the pivot support clamp and secure with the R clip.

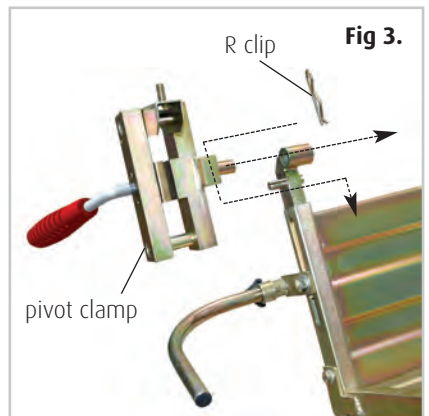


**Fig 4.** Carefully lower the chainsaw bar into position between the two solid blocks in the pivot clamp and ensure a minimum 2 cm gap between the body of the chainsaw and the clamp. Make sure that the bar is approx. 90° to the clamp and well clear of the chain before tightening the wheel clamp. Once tightened, test the arc of travel to make sure that the chain bar does not touch any part of the saw bench.

**THE PIVOT CLAMP SHOULD BE REGULARLY CHECKED FOR TIGHTNESS!**

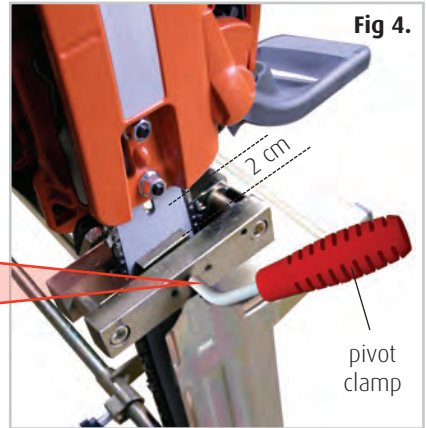

**Fig 5.** Mount the hole in the guard on the bolt protruding upwards from the clamp, loosely securing it with the nut and washers. Now slide the guard backwards or forwards as necessary to a position in which the guard is well clear of the chain and then tighten the nut. Recheck for clearance.



**The LOGMASTER is now ready for use.**

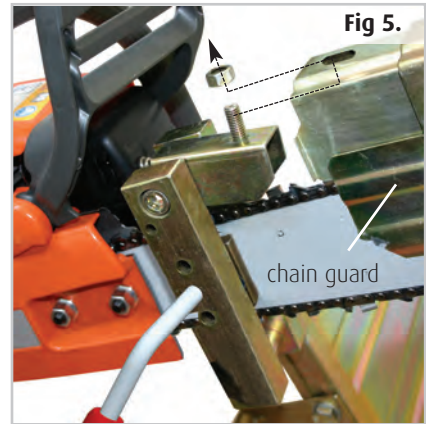

## INSTRUCTION GUIDE FOR SAFE USE OF THE LOGMASTER

- Place the wood on the log table pushing the end to the measuring rod. Hold the wood down firmly with your left hand, keeping your hand well clear of the cutting edge of the chainsaw, and arc the chainsaw down to cut.
- The log table on the Logmaster is designed for taking lengths to a maximum of 1.80 metres and a maximum diameter of 25 cm. The maximum permissible load on the Logmaster is 120 kg.
- The Logmaster chain guard is designed for chainsaws with a cutting bar not longer than 45 cm. A chainsaw with a cutting bar longer than 45 cm (which protrudes beyond the chain guard) is not recommended.
- The pivot clamp and guard must be detached when using the chainsaw separately from the Logmaster.
- The pivot clamp and support must be kept well lubricated.
- The Logmaster must be used on flat surfaces only.
- Ensure the nuts and bolts on the pivot clamp and guard are kept tight at all times.
- When using a chainsaw with the Logmaster it is essential that all safety codes and practices of the chainsaw manufacturer and Health and Safety Executive are fully followed.

# Logmaster Parts

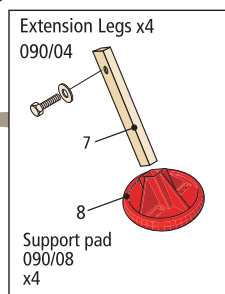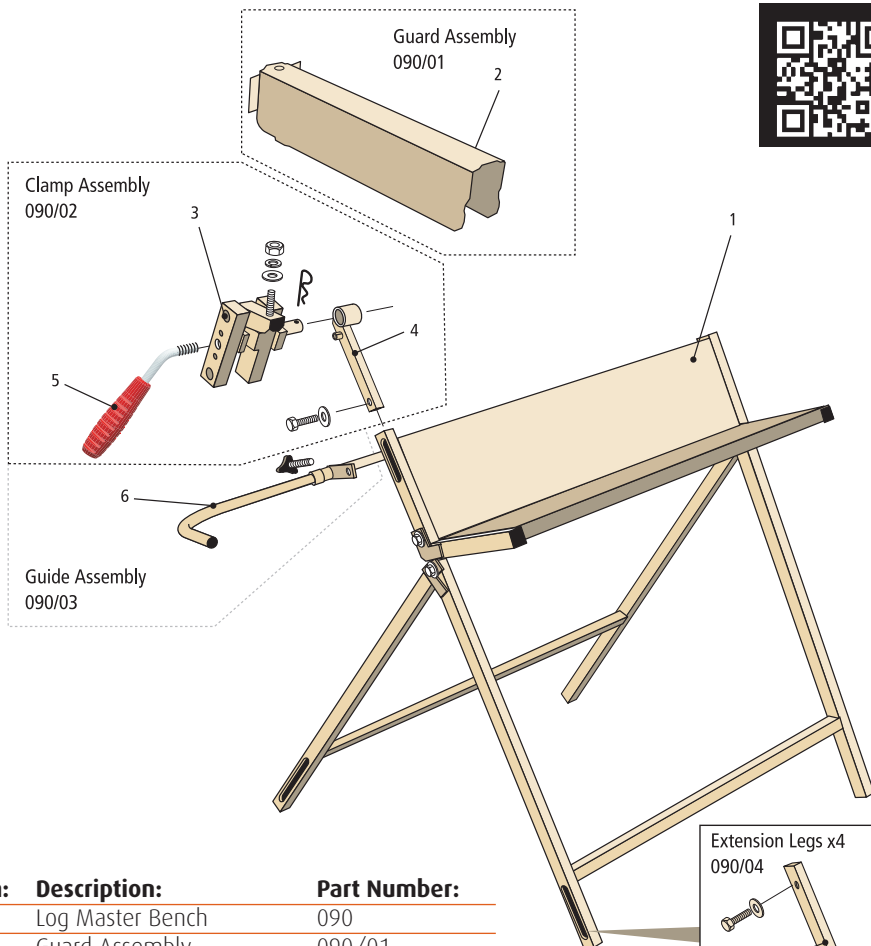

Item:	Description:	Part Number:
1	Log Master Bench	090
2	Guard Assembly	090/01
3	Clamp Assembly	090/02
4	Slide Bar	
5	Clamp Assembly Handle	
6	Guide Assembly	090/03
7	Leg Extensions x4	090/04
8	Support pad x4	090/08



Portek Limited, Bryn Hall, Knolton Bryn, Overton-on-Dee, Wrexham, LL13 0LF.

Tel: +44(0)1234 889454 Fax: +44(0)1234 889464 www.portek.co.uk