



IMPORTANT!




Instructions on how to use BANGER ROPES safely

Explosives 1.4G - UN number 0431 - Articles, pyrotechnic for technical purposes. These are potentially dangerous items and must be handled with care, please read the following instructions and follow them carefully. CE NUMBER 1395-P1-0274/2015 - SOUND EMITTER

- These powerful banger ropes should be handled with extreme care - always wear appropriate personal protective equipment when handling and lighting banger ropes.
- Banger ropes are for professional use and are only intended for agricultural bird scaring in open fields, and must not be used as fireworks.
- The banger rope is designed to burn for a period of approximately 5 - 6 hours for day ropes or up to 12 hours for continuation ropes.
- Bangers are placed equal distances apart to explode at 15 - 30 minute intervals.
- **NEVER** hang a banger rope where a member of the general public could tamper with it.
- **NEVER** hang a banger rope on a public footpath or bridleway where the general public have a right of way.
- Beware of neighbour's livestock near the banger rope site.
- Keep well away from flammable materials including flammable gases.
- **NEVER** light the fuse of a banger.
- **DO NOT** hold the rope during lighting or once it is alight.
- **DO NOT** dismantle the rope or the bangers.
- **NEVER** remove an individual banger off the rope.
- **NEVER** relight a banger rope that has been extinguished. Dispose in the recommended way - see below.
- If a banger falls to the ground and has not exploded, do not try to re-ignite it. Any unexploded bangers should be left untouched for at least 6 hours, pick up with a pair of tongs. After which they should be soaked in a bucket of water for a minimum of 24 hours. Then dispose in normal refuse while still damp. **NEVER** relight a banger that has been soaked in water and subsequently dried out.
- If a banger has come off the rope and is loose in the box **NEVER** light it. It should be soaked in a bucket of water for 24 hours. Then dispose in normal refuse while still damp.
- Always store in a cool dry place, well away from any source of ignition, flammable materials or other hazardous goods. A metal cabinet is ideal. Use within 5 years of purchase.
- Not to be sold to, or used by persons under 18 years of age.

1. REMOVE ROPE FROM BOX AND UNTIE SO IT CAN HANG FREELY


2. HANG ROPE IN A TREE AWAY FROM WHERE IT COULD BE FOUND - A MINIMUM OF 1.8m FROM THE GROUND USING THE HANGING STRING PROVIDED

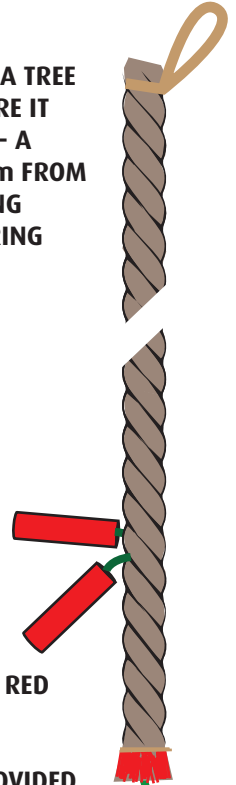

3. STRAIGHTEN FUSE AT RED END OF BANGER ROPE

4. LIGHT THE TAPER PROVIDED

5. AT ARM'S LENGTH, IGNITE THE FUSE ENSURING THE TAPER IS KEPT WELL AWAY FROM THE LOWEST BANGER

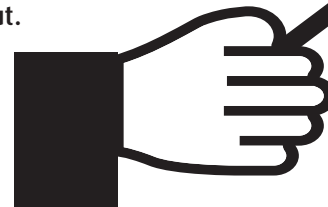

6. RETIRE IMMEDIATELY TO A MINIMUM DISTANCE OF 15M

Imported by Portek Ltd, Stroud, UK



ALWAYS USE THE APPROPRIATE SAFETY AND PROTECTION EQUIPMENT



FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY